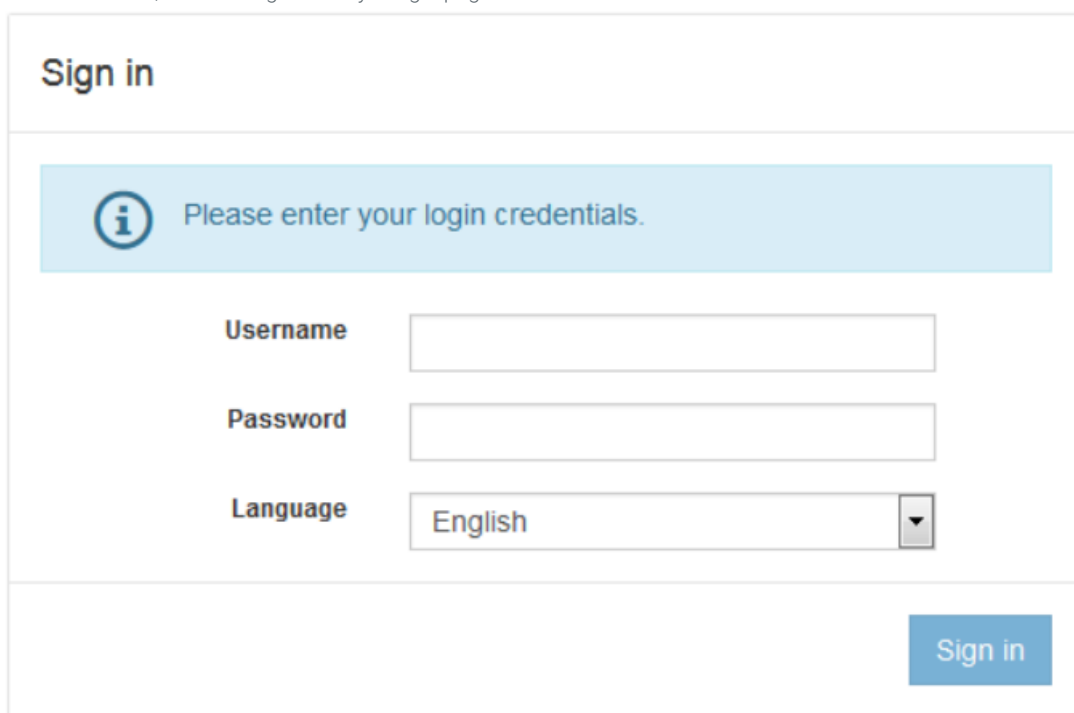


Meteo Data Logger FTP Integration Setup Guide

Meteo Data Logger FTP Integration Setup Guide

AlsoEnergy supports the ability for Meteo data loggers to push data to the PowerTrack platform via FTP without relying on any additional data loggers on site. This document outlines the setup procedure necessary to get a Meteo logger device uploading to AlsoEnergy servers to allow for devices to be monitored in PowerTrack.

1. Each site uses a unique set of credentials for FTP uploads. Multiple Meteo loggers on the same site can use the same set of credentials, but FTP credentials should not be shared between different sites, as the AlsoEnergy data ingest recognizes different sites based on the unique credentials used for the uploads. You should receive FTP credentials for each site that you are configuring from an AlsoEnergy representative. You will need these when you begin configuring your Meteo device.
2. Open a web browser and connect to the Meteo logger via the local network or remotely by entering in its IP address (or the modem's IP and port forward if connecting remotely.) If on the same local network as the Meteo logger, you may be able to log into its web interface by connecting to <http://blue-xnnnnnnnn> instead, where the 'n' characters are replaced by the last 8 digits of the device's serial number. Upon successful connection, should be greeted by a login page that looks like this:

The image shows a web browser window displaying a 'Sign in' page for a Meteo data logger. The page has a light gray background. At the top, the text 'Sign in' is displayed in a bold, dark font. Below this, there is a light blue horizontal bar containing an information icon (a lowercase 'i' inside a circle) and the text 'Please enter your login credentials.' in a dark font. Underneath the bar, there are three input fields: 'Username' with a text box, 'Password' with a text box, and 'Language' with a dropdown menu currently showing 'English'. At the bottom right of the form, there is a blue button with the text 'Sign in' in white.

By default, the Username and Password are both set to either "service" or "admin" for Meteo loggers.

3. Once logged in, click on the "PV PLANT" tab along the top navigation bar, then click on the "Online Portal" menu along the left hand side of the UI to access the FTP-Push configuration page.

The screenshot displays the 'PV-PLANT' configuration page. The top navigation bar includes 'COCKPIT', 'MONITORING', 'PV-PLANT' (selected), 'DEVICES', and 'SYSTEM'. The left sidebar has 'Basic-Data', 'Power Control', and 'Online-Portal' (highlighted). The main content area is divided into four sections:

- Select datalogger mode:** Shows 'Standalone' as the selected mode, with 'Master' and 'Slave' as options.
- Plant-Data:** Contains input fields for 'Agreed power rating P_{av} ' (1000 kW), 'AC nominal voltage $U_{nominal}$ ' (20 kV), and 'Max apparent power S_{av} ' (1100 kVA). A 'Save' button is at the bottom.
- Active-Power configuration:** Includes a 'Methods' dropdown set to 'P(DI)', a toggle for 'Activate Intelligent Power Limit (IPL)' set to 'ON', an 'Options' section with 'Gradientlimit P-Method' set to 'Fully on', 'Gradient' set to '1.837 %/s', a toggle for 'Limit to Agreed power rating P_{av} ' set to 'ON', and a 'Fallback value' set to '70 %'.
- Reactive Power:** Features a 'Default method switch' section with a 'Method switch' toggle set to 'OFF' and a 'Default Method' dropdown set to 'Q(DI)'.

4. Configure the FTP-Push using the following settings. Please note that the FTP-Server field will differ depending on which instance of PowerTrack (North America / Europe / etc.) the site is hosted on.

Push-Service: ON

FTP-Server (Europe): meteoftp.alsoenergy.eu

FTP-Server (North America): aedataftp.alsoenergy.com

FTP-Port: 21

Upload Directory: <Serial Number of the Meteo logger>

Username: (Provided by AlsoEnergy, and should include your PowerTrack site ID)

Password: (Provided by AlsoEnergy)

FTP-Push settings

Configuration

Push-Service

ON

FTP-Server

FTP-Port

21

Upload Directory

(Serial number of the Meteo logger)

(The directory is not created automatically)

Username

meteofp-54463

Password

Save

Once you have correctly configured the FTP-Push settings, click the "Save" button.

5. In PowerTrack, you will need to add the logger's serial number as the Gateway ID for each device that you wish to populate data for. Log in at apps.alsoenergy.com or apps.alsoenergy.eu, and navigate to the site that you are configuring.
 1. Click the Wrench + Screwdriver configure icon to open the Site Configuration page.
 2. Click the Hardware tab on the navigation menu on the left side.
 3. Enter in the Meteo logger's serial number in the Gateway ID column for each device that it is monitoring.
 4. Click the "Save" button in the top right corner to commit your changes to the PowerTrack configuration.

PowerTrack AlsoEnergy

Global

- Top-Level Alerts
- Top-Level Map
- Top-Level Portfolio
- Top-Level Rule Tool

Site

- Status
- Alerts
- Rule Tool
- Charts
- Hardware**
- Configuration
- More Views...
- MiniSite
- Add New...

meteo

Search By

Name

Include

Meteo FTP Test

MPT Test

Check All Hardware

Meteo FTP Test: Awaiting AE Approval - Please contact support for more information

Description	Driver	Gateway ID	Serial Number	Port	Address	Unit ID	FID	Sort
SEL 735 Meter	SEL 735 Meter			0	0	0	PM0	11
Meteo FTP Inverter 1	Meteo FTP Inverter	79810*****		0	0	0	PV1	21
Meteo FTP Inverter 2	Meteo FTP Inverter	79810*****		0	0	0	PV2	22
Meteo FTP Inverter 3	Meteo FTP Inverter	79810*****		0	0	0	PV3	23
Meteo FTP Inverter 4	Meteo FTP Inverter	79810*****		0	0	0	PV4	24
Lufft Weather Station	Lufft WS10			0	0	0	WS0	0

ADD NEW...

6. If you are having difficulty finding the serial numbers for your logger, you can find them within the logger's web interface by navigating to PV Plant > Master Data, or System > Logger Data and it should be visible under Serial Number.

Meteo logger Serial Numbers are typically numerical, and of the form79810XXXXXXX .

7. In PowerTrack, you will also need to add the serial number for each unique device to the Serial Number field for every piece of hardware that the Meteo logger will be monitoring. These serial numbers can be found within the XML files that the Meteo logger uploads, and are denoted by the <uid> or <serial> attribute for each <device>.
ex:

```

1 <?xml version="1.0" encoding="UTF-8"?>
2 <mii version="2.0" targetNamespace="http://api.sspcdn.com/mii" xmlns="http://api.sspcdn.com/mii">
3   <datalogger>
4     <configuration xmlns="http://api.sspcdn.com/mii/datalogger/configuration">
5       <uuid>
6         <vendor>meteocontrol</vendor>
7         <serial>123456 7890 1234</serial>
8       </uuid>
9       <next-scheduled-transfer>2021-01-12T23:45:00Z</next-scheduled-transfer>
10      <name>MeteoSampleSite</name>
11      <firmware>17.1.7 / 17.2.8</firmware>
12      <devices>
13        <device type="meteo" id="208701346">
14          <uid>208701346</uid>
15          <name>Pyranometer</name>
16          <vendor>KippZonen</vendor>
17          <model>SMP10</model>
18          <serial>208701346</serial>
19          <firmware>201</firmware>
20          <driver>KIPP_ZONEN_SMP11</driver>
21          <interface-type>RS485</interface-type>
22          <interface-address>BM_RS485_2</interface-address>
23          <address>57</address>
24        </device>
25        <device type="inverter" id="A20212013867">
26          <uid>A20212013867</uid>
27          <name>INV 8</name>
28          <vendor>SunGrow</vendor>
29          <model>SG125HV</model>
30          <serial>A20212013867</serial>
31          <firmware>ARM: LCD_SG125KHV_V03_B_M, DSP: DSP_SG125KHV_V11_B</firmware>
32          <driver>SUNGROW_STRING_INVERTER</driver>
33          <interface-type>RS485</interface-type>
34          <interface-address>BM_RS485_1</interface-address>

```

Pyranometer
Serial #

Inverter 1
Serial #

- As with step 5, navigate to the hardware page in PowerTrack by clicking the Wrench + Screwdriver, then selecting "Hardware" from the menu bar on the left side.
- For each device, find the entry in the Meteo Logger XML file, and copy the value of the <uid> or <serial> field into PowerTrack in the Serial Number column.

PowerTrack **AlsoEnergy** Help What's New English (United States) miket

Global

- Top-Level Alerts
- Top-Level Map
- Top-Level Portfolio
- Top-Level Rule Tool

Site

- Status
- Alerts
- Rule Tool
- Charts
- Hardware**
- Configuration
- MiniSite
- + Add New...

meteo

Search By

Name

Include

Meteo FTP Test

MPT Test

Hardware

Meteo FTP Test: Awaiting AE Approval - Please contact support for more information

Check All Hardware

Description	Driver	Gateway ID	Serial Number	Port	Address	Unit ID	FID	Sort
SEL 735 Meter	SEL 735 Meter			0	0	0	PM0	11
Meteo FTP Inverter 1	Meteo FTP Inverter		A20212013867	0	0	0	PV1	21
Meteo FTP Inverter 2	Meteo FTP Inverter		A20212013456	0	0	0	PV2	22
Meteo FTP Inverter 3	Meteo FTP Inverter		A20212113651	0	0	0	PV3	23
Meteo FTP Inverter 4	Meteo FTP Inverter		A20221106742	0	0	0	PV4	24
Lufft Weather Station	Lufft WS10			0	0	0	WS0	0

ADD NEW...

Online URL: <https://kb.alsoenergy.com/article.php?id=1250>