

Adding KPI Library script to Ignition


Table of Contents

Initial Setup

Get credentials for SourceGear Vault Client.


Retrieve KPI Library Source Files

1. Log into SourceGear Vault
2. Choose Libraries Repository

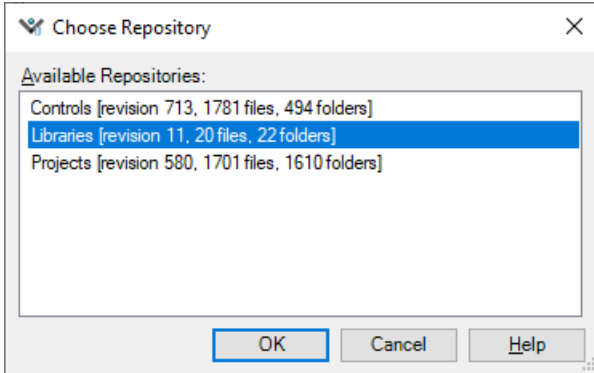


3. KPI import files are located at \$/Ignition/KPI

 1. Choose the most recent version of the zip fold and save to local destination

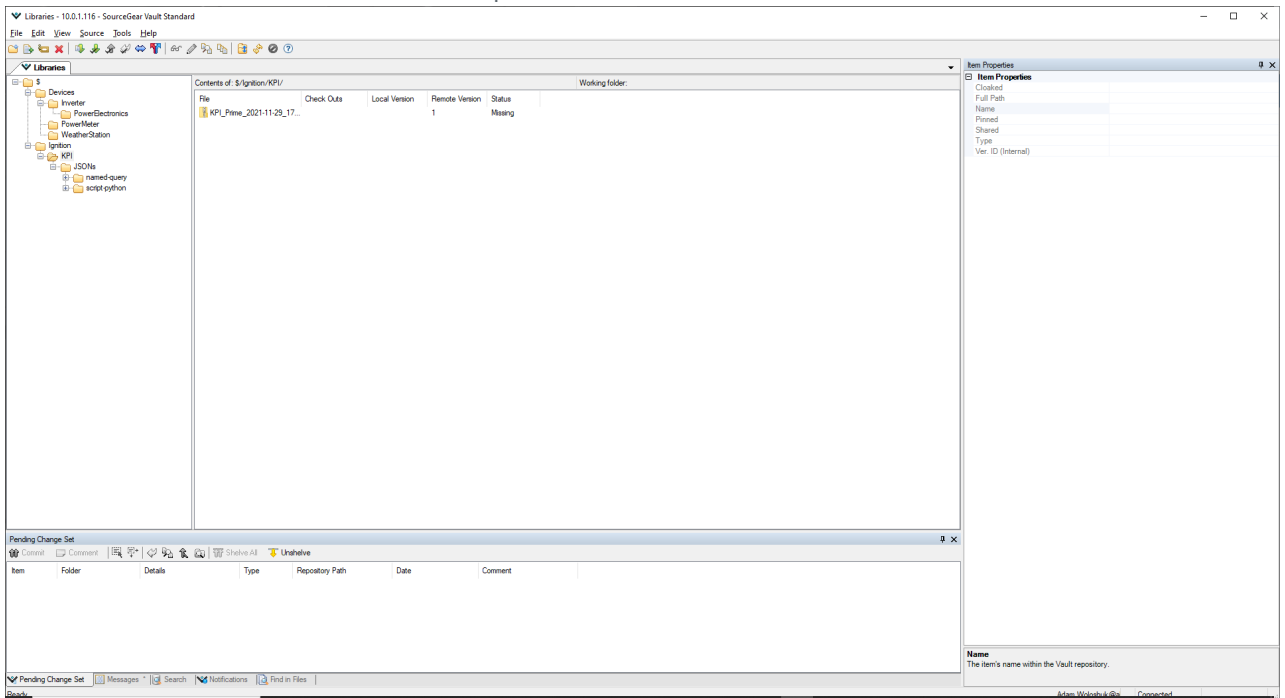

4. Open Ignition Designer and navigate to project that needs the KPI Library
5. Navigate to File ->Import and choose the KPI Library zip file

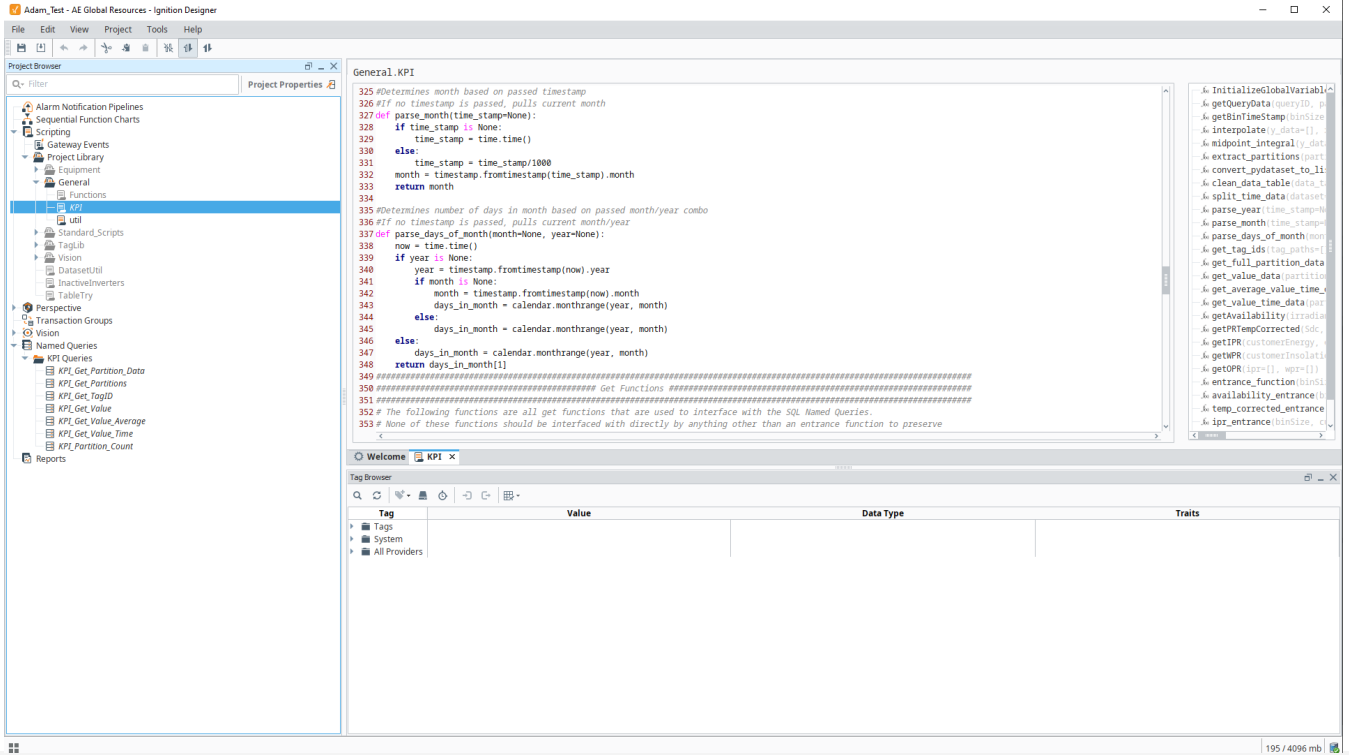

Online URL: <https://kb.alsoenergy.com/article.php?id=1805>

- If import fails the KPI Library can be manually imported by importing and manually copying the code located in the folders found in SourceGear Vault at \$/Ignition/KPI/JSONs