

Huawei SmartLogger FTP Integration Setup Guide

Mike Taylor Tue, Dec 2, 2025 Site Commissioning


9326

Huawei SmartLogger FTP Integration Setup Guide

STEM supports the ability for Huawei SmartLoggers to push data to our platform without relying on an additional data logger. This document outlines the setup procedure necessary to get a Huawei SmartLogger device uploading to STEM servers to allow for devices to be monitored in Powertrack. For reference, Huawei's documentation for the SmartLogger FTP configuration can be seen

here: <https://support.huawei.com/enterprise/en/doc/EDOC1100108365/b2db81a0/how-do-i-set-ftp-parameters> .

1. Each site uses a unique set of credentials for FTP uploads. Multiple SmartLoggers on the same site can use the same set of credentials, but credentials should not be used between different sites, as the STEM data ingest recognizes different sites based on the credentials used for the upload. You should receive login credentials for each site that you are configuring from a Stem representative. You will need these when you are configuring your SmartLogger device.
2. Open a web browser and connect to the Huawei SmartLogger via the local network or remotely, by entering in its IP address (or the modem's IP and port forward if connecting remotely.) You should be greeted by a login page that looks like this:

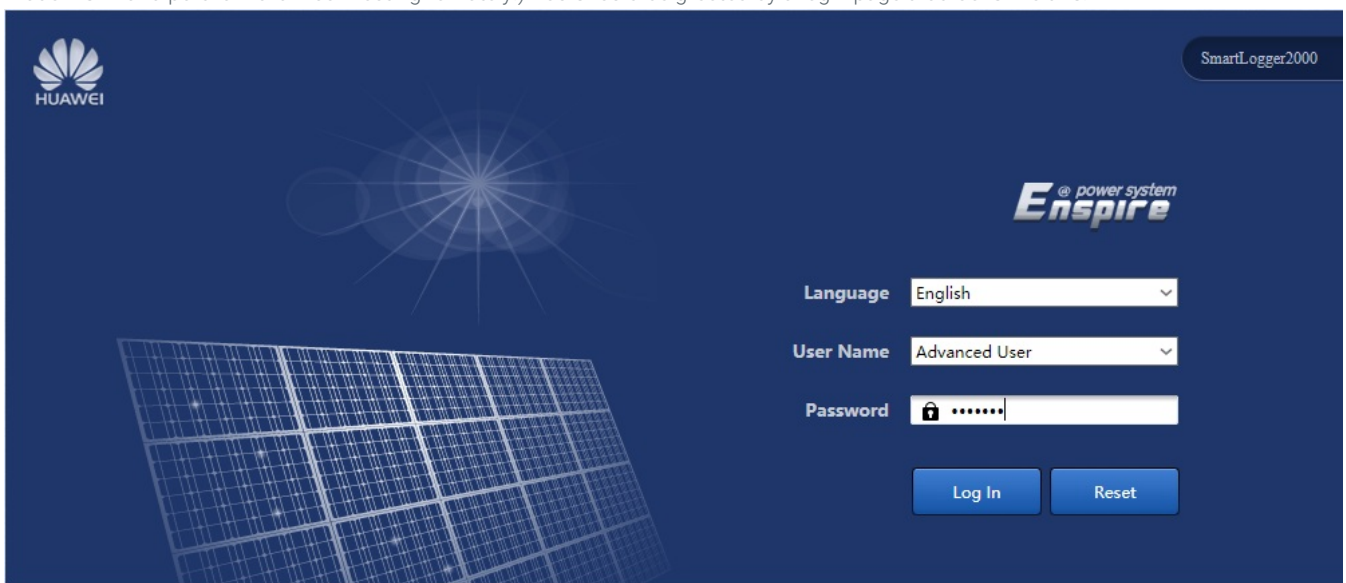

3. Select the "Advanced User" option from the User Name field drop-down menu and enter in the password for this logger. (On many sites, the SmartLogger's password is left as the default of 'Changeme'.) Once you have entered the credentials click "Log In" to proceed to the SmartLogger's configuration page.
4. On the SmartLogger configuration page, click on the Settings tab near the top center, and then the Extended Parameters > FTP link along the left side of the navigation menu. This should take you to a page that looks like this:

5. Enter in the FTP credentials obtained in step 1 in the Basic Parameters fields near the top. The FTP server will differ depending on what instance of PowerTrack (North America / Europe / etc.) the site is hosted on. You can leave the "Remote directory" field blank.
- European Instance FTP Server: huaweiftp.alsoenergy.eu
- North American Instance FTP Server: huaweiftp.alsoenergy.com

Basic parameters	
FTP server	huaweiftp.alsoenergy.eu
User name	huaweiftp_012345
Password	*****
Remote directory	

6. in the Report Settings region, use the following configuration options:
- Data export = Enabled
- File format = Format 2 (this is important as Format 1 does not include data for the SmartLogger itself or cumulative energy values)
- File name = minYYYYMMDDHHmm.csv
- Time format = YYYY-MM-DD
- Export Mode = Cyclic
- Export Interval = 5 (this is the number of minutes between data points. It can be set to 15 for less granular data on slower/smaller sites)
- File Mode = Periodically added data

Report Settings	
Data export	Enable
File format	Format 2
File name	minYYYYMMDDHHmm.csv
Time format	YYYY-MM-DD
Export mode	Cyclic
Export interval	30 min (5~1440)
File mode	Periodically added data

Format 2 has two more information points than Format 1: E-Day (current-day energy yield) and E-Total (total

energy yield).

Format 3 has more information points than Format 1 and Format 2: power meter, PID module, user-defined device, and SmartLogger data.

Format 4 has more information points than Format 3: active and reactive power of power meters.

7. Click the "Start report test" button at the bottom of the page and give the logger several minutes to try and make the connection. If it **succeeds**, then the Status will change to "Success" and the "Last transmission" field should update to the current date and time. Click Submit, and the SmartLogger should begin uploading data via FTP to Stem. If the test report **fails**, then double-check that you have correctly entered in the login credentials, and attempt to troubleshoot the network connection between the site and the FTP Server end point.
8. In PowerTrack, you will need to add the serial numbers for each device that you wish to populate data for. Log in apps.alsoenergy.com or apps.alsoenergy.eu, and navigate to the site that you are configuring.
 1. Click the Wrench + Screwdriver configure option for the site.
 2. Click the Hardware tab on the navigation menu on the left side.
 3. Enter in the associated serial numbers for each Huawei SmartLogger FTP device.
 4. Click Save to commit your changes to the PowerTrack configuration.

PowerTrack AlsoEnergy

Hardware

huawei ftp test

Search By Name

Include

Hardware

Check All Hardware

Description	Driver	Gateway ID	Serial Number	Port	Address	Unit ID	FID	Sort
Huawei FTP Inverter 1	Huawei FTP Smart Inverter		1010001010ES8398	0	0	0	PV0	1
Huawei FTP Inverter 2	Huawei FTP Smart Inverter		1010001010ES8399	0	0	0	PV1	2
Huawei FTP Inverter 3	Huawei FTP Smart Inverter		1010001010ES8400	0	0	0	PV2	3
Huawei FTP Inverter 4	Huawei FTP Smart Inverter		1010001010ES8401	0	0	0	PV3	4
Huawei FTP Weather 1	Huawei FTP Weather Sensi		1010001010ES8402	0	0	0	WS0	51
Huawei FTP Weather 2	Huawei FTP Weather Sensi		1010001010ES8403	0	0	0	WS1	52

ADD NEW...

5. If you are having difficulty finding the serial numbers for the devices, you can find them in the SmartLogger itself, by navigating to the Maintenance -> Device List page, as shown below:

Enspire

Deployment Wizard Over View Monitoring Query Settings Maintenance

Device List

Total Device Qty.:28

Sorting mode Port+Comm Addr. Confirm

No.	Device	port	Comm Address	Logical addr.	Transformer No.	Winding No.	SN	Device status
1	1-1-a	PLC	1	10	0	0	21010735296TJ85	●
2	1-1-b	PLC	2	28	0	0	21010735296TJ85	●
3	1-1-c	PLC	3	7	0	0	21010735296TJ85	●
4	1-1-d	PLC	4	6	0	0	21010735296TJ79	●
5	1-1-e	PLC	5	12	0	0	21010735296TJ79	●
6	1-2-a	PLC	6	16	0	0	21010735296TJA9	●
7	1-2-b	PLC	7	2	0	0	21010735296TJA9	●
8	1-2-c	PLC	8	24	0	0	21010735296TJA9	●
9	1-2-d	PLC	9	4	0	0	21010735296TJA9	●
10	1-2-e	PLC	10	27	0	0	21010735296TJA9	●
11	1-3-a	PLC	11	19	0	0	21010735296TJA9	●
12	1-3-b	PLC	12	20	0	0	21010735296TJA9	●
13	1-3-c	PLC	13	13	0	0	21010735296TJA9	●
14	1-4-a	PLC	14	21	0	0	21010735296TJA9	●
15	1-4-B	PLC	15	30	0	0	21010735296TJB9	●
16	1-4-c	PLC	16	8	0	0	21010735296TJA9	●
17	1-4-d	PLC	17	26	0	0	21010735296TJA9	●
18	1-5-a	PLC	18	17	0	0	21010735296TJA9	●
19	1-5-b	PLC	19	3	0	0	21010735296TJA9	●
20	1-5-c	PLC	20	18	0	0	21010735296TJA9	●
21	1-5-d	PLC	21	22	0	0	21010735296TJA9	●
22	1-5-e	PLC	22	15	0	0	21010735296TJA9	●
23	1-6-a	PLC	23	9	0	0	21010735296TJA9	●

Modify Device Info Import Device Info Export Device Info

Time 2020-10-02 16:24 Grid dispatch P: 94.0% Q: NA Copyright © Huawei Technologies Co., Ltd. 2018. All rights reserved.

